5. Wi-Fi Setup

Download and install the Hi-Fly app by scanning below QR code, or search "Hi-Fly" in the App Store (iOS devices) / Google Play (Android devices).

Open the App and follow the on-screen guide to set up your Wi-Fi audio network.

Note: If you use the Ethernet connection, no network setup is required. Just open the app and the device is ready for use!

*Analog input signal can be shared with other Wi-Fi audio devices in Multi-Room mode.

*For additional information, see the Hi-Fly Audio App Guide and Product Manuals online at daytonaudio.com.

Scan to download for iOS



Scan to download for Android



5-Year Limited Warranty

See daytonaudio.com for details



daytonaudio.com tel + 937.743.8248 info@daytonaudio.com 705 Pleasant Valley Dr. Springboro, OH 45066





WI-FI BLUETOOTH MULTI-ROOM 2X20W AMPLIFIER WITH IR REMOTE

 
Model: WB40A Quick Start Guide




Dayton Audio® (4) Last Revised: 4/24/2019

1. Contents


- Wi-Fi/Bluetooth Audio Amplifier
- 15V Power Adapter
- 3.5mm Male to RCA Cable
- 3.5mm to Male to Male Cable
- Quick Start Guide
- Screws/Driver
- Mounting Pad
- IR Remote




Wi-Fi Bluetooth Audio Amplifier

 


 3.5 mm to Male to RCA Cable



  3.5 mm to Male to Male Cable






(q)

DAYTONAUDIO

IR Remote


15V Power Adapter

2. Connections

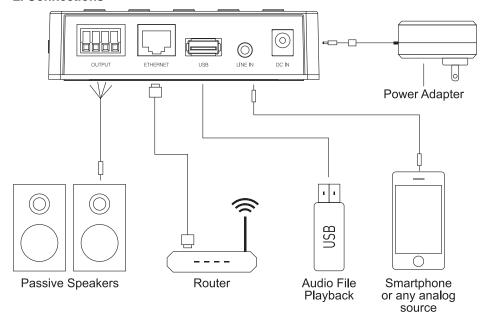

(2)

3. Functions and Controls

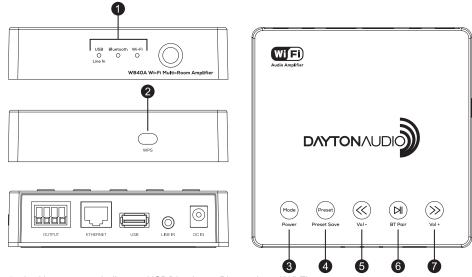

- 1. Led input source Indicators USB/Line Input, Bluetooth and Wi-Fi
- 2. WPS Button for network connection and factory reset

Button controls:

| | Quick press function | Long press (hold) function |
|----|-------------------------------------|----------------------------|
| 3. | Mode – changes the input source ——— | Power ON/OFF |
| 4. | Preset – recall saved presets ———— | Preset save |
| 5. | Back — | Vol – |
| 6. | Play/Pause ——— | BT pairing |
| 7. | Next — | Vol + |

4. IR Remote

- 1. ON/OFF
- 2. Play All connects/disconnects all Wi-Fi audio devices in multi-room mode
- 3. Mute
- 4. Play/Pause
- 5. Volume Up
- 6. Volume Down

- 7. Next/Forward
- 8. Previous/Back
- 9. Audio Source select
- 10. EQ-Press to select (Flat, Rock, Pop or Vocal) preset EQ options

(3)

11. Preset recall 1-6

